

HOW TO TURN CO₂ ON AND OFF

Please Turn CO₂ off when not in use!
This prevents the CO₂ pump from burning out



Leave temperature ON but turn CO₂ OFF

Step 1

Press on the CO₂ tab and set CO₂ % to 0 (zero)
There is 0.1% CO₂ in the air and the touch screen will read it



Note: When not in use
temperature should be
set to 25 °C

Step 2

Turn OFF air pump as follows:
Press Settings → Gas → Air Source → Compressed Air → Save



Leave temperature ON but turn CO₂ back ON

Step 1

Press on the CO₂ tab
and set CO₂ % to 5% or
your desired set point

