
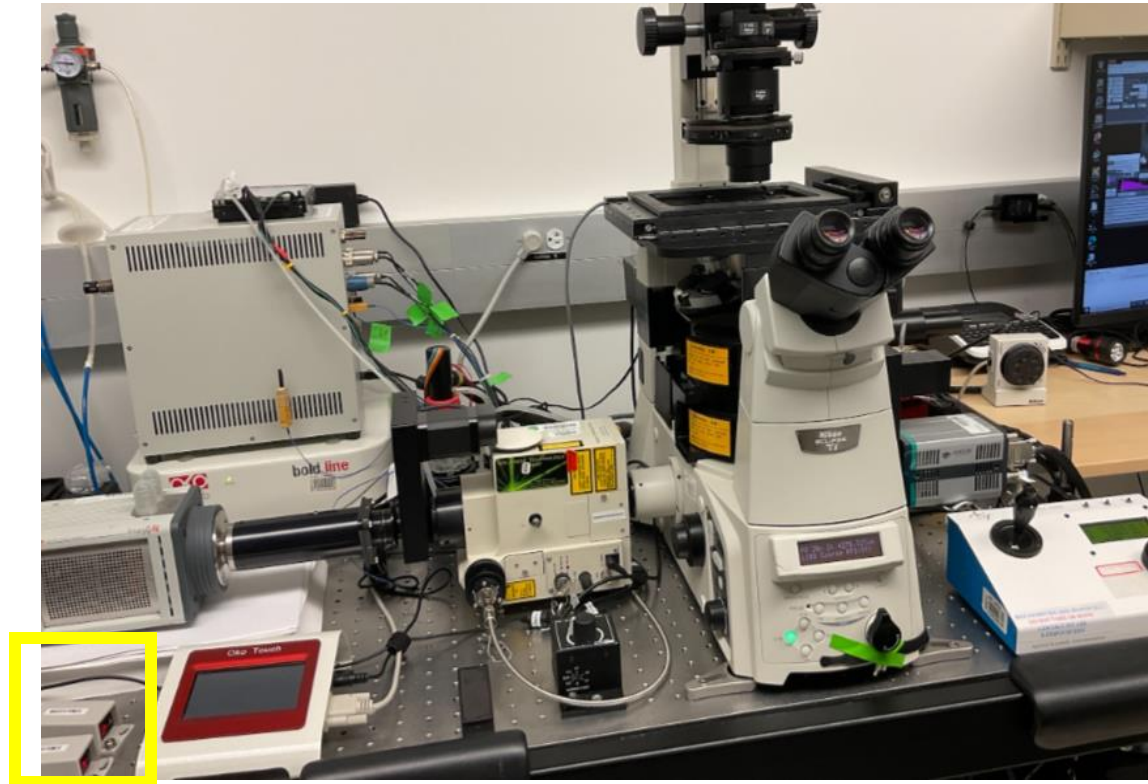


Turn ON the CVRI SD #1 -> Press both master switches -> wait for everything to turn on -> Open software

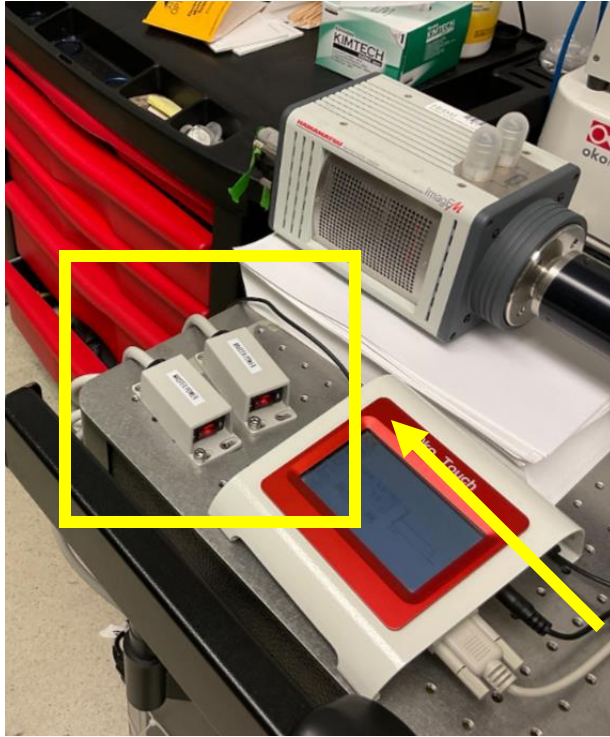

Turn OFF the CVRI SD #1 -> Close Software -> Wait for it to fully close -> Turn off both master switches